

MINOLTA RP503 ERROR CODES

- P1** Paper empty or misfeed. All paper in the cassette has been used up or a misfeed has occurred in the paper take-up or u-turn area.
- P2** Paper empty or misfeed. A misfeed has occurred somewhere along the paper feed path.
- P3** Paper empty or misfeed. All misfeed occurred in the fusing/exit area.
- C1** Paper empty or misfeed. The mirror carriage drive mechanism is malfunctioning.
- C2** Service Representative Call. There is a charge leakage from the coronas.
- C3** Service Representative Call. The surface temperature of the fusing roller becomes excessively high (more than 200 °C).
- C4** Service Representative Call. The temperature of the fusing roller remains too low.

MINOLTA RP504A ERROR CODES

- P1** Paper empty or misfeed. All paper in the cassette has been used up or a misfeed has occurred in the paper take-up area.
- P2** Paper empty or misfeed. A misfeed has occurred somewhere along the paper feed path.
- P3** Paper empty or misfeed. A misfeed occurred in the fusing/exit area.
- C1** Paper empty or misfeed. The mirror carrier drive mechanism is malfunctioning.
- C2** Service Representative Call. There is a charge leakage from the coronas.
- C3** Service Representative Call. The surface temperature of the fusing roller becomes excessively high (more than 200 °C).
- C4** Service Representative Call. The temperature of the fusing roller remains too low.

MINOLTA RP600Z ERROR CODES

- P1** Paper empty. Paper misfeed (paper take-up).
- P2** Paper misfeed (transport fusing).
- P3** Paper misfeed (paper exit).
- E1** Defective mirror scan system.
- C1** Defective scan table sliding system.
- C3** An abnormally high fusing temperature.
- C4** An abnormally low fusing temperature.
- C5** Defective main drive motor.
- C6** Defective cooling fan motor.
- C7** Defective toner empty detection.

MINOLTA RP603Z ERROR CODES

- U7** Cover open.
- PO** Cassette not slid in position.
- P1** Paper empty - A paper misfeed at the take-up section.
- P2** A paper misfeed at the transport section.
- P3** A paper misfeed at the exit station.
- CO** Main motor malfunction.
- C1-01** Scan table drive motor malfunction.
- C1-02** Scanning motor malfunction.
- C2** Drum charge/image transfer corona malfunction.
- C3** Abnormally high fusing temperature.
- C4** Abnormally low fusing temperature.
- C5-01** Full shutter malfunction.
- C5-02** Right-side shutter malfunction.
- C5-03** Left-side shutter malfunction.
- C5-04** Centering motion failure.
- C6** Erase lamp malfunction.
- Cd** Thermistor malfunction.
- CC-01** Power unit cooling fan motor malfunction.
- CC-02** Protection lamp cooling fan motor malfunction.
- CC-03** Cooling fan motor malfunction.

MINOLTA 605Z ERROR CODES

- P1** Paper misfeed - Paper take-up to synchronizing rollers.
- P2** Paper misfeed - Synchronizing rollers to fusing unit.
- P3** Paper misfeed - Fusing unit to exit.
- C1** Defective mirror drive mechanism.
- C2** Defective corona unit.
- C3** An abnormally high fusing temperature.
- C4** An abnormally low fusing temperature.
- C5** Defective auto masking side shutters.

MINOLTA 606Z ERROR CODES

- P1** Paper misfeed (paper take-up to synchronizing rollers).
- P2** Paper misfeed (synchronizing rollers to fusing unit).
- P3** Paper misfeed (fusing unit to exit).
- C1** Defective mirror drive mechanism.
- C2** Defective corona unit.
- C3** An abnormally high fusing temperature.
- C4** An abnormally low fusing temperature.
- C5** Defective auto masking side shutters.
- C6** Defective projection lens identifying mechanism.
- L1** Improperly installed projection lens.

MINOLTA RP609Z ERROR CODES

- PO** A paper misfeed at the paper take-up section.
- P1** A paper misfeed at the paper take-up section.
- P2** A paper misfeed at the transport section.
- P2A** A paper misfeed at the exit section.
- Pc** A card misfeed in the autocard feeder.
- PL** A blown projection lamp.
- C1** Scanning malfunction.
- C2** Improper charging.
- C3** Abnormally high fusing temperature.
- C4** Abnormally low fusing temperature.
- C5** Side shutter malfunction.
- C6** Erase lamp malfunction.
- C7** Zooming malfunction.
- C8** Mirror drive malfunction.
- Cb** Cutter malfunction.
- Cc** Serial communication error.

MINOLTA DR1600 ERROR CODES

- E-01** Film unit mounting board malfunction.
- E-02** Electrical circuit board to the inside of a copy malfunction.

MINOLTA RP607Z ERROR CODES

PO	A paper misfeed at the bulk paper loader.
P1	A paper misfeed at the paper take-up section.
P2	Paper misfeed at the paper take-up section.
P3	A paper misfeed at the transport section.
CO	Main drive motor malfunction.
C1-01	Scan table drive motor malfunction.
C1-02	Scanning motor malfunction.
C2-01	Drum charge corona malfunction.
C2-02	Image transfer/paper separator corona malfunction.
C3	Abnormally high fusing temperature.
C4	Abnormally low fusing temperature.
C5-01	Full shutter malfunction.
C5-02	Right-side shutter malfunction.
C5-03	Left-side shutter malfunction.
C5-04	Centering motion failure.
C6	Erase lamp malfunction.
C7	Developing unit switching failure.
U7	Cover left open.

MINOLTA MS6000 MKII ERROR CODES

L2	Projection lamp malfunction scanner.
Lb	Battery low scanner.
C1	Scan unit drive malfunction scanner.
C2	Scan mirror drive malfunction scanner.
C3	Shading correction malfunction scanner.
C4	Cooling fan motor malfunction scanner.
C6	Fusing malfunction printer.
C7	Laser diode malfunction printer.
C8	Polygon motor malfunction printer.
C9	Main motor malfunction printer.
CA	Cooling fan motor malfunction printer.
Cb	Communication error scanner or printer.
CC	Communication error scanner or ACF-8.
CE	PC interface kit board malfunction scanner.
CF	Firmware malfunction scanner.
CL	Printer clock malfunction scanner.
PE	Paper empty printer.
PF	Top paper sensor (paper full)
PO	Paper size error printer.
P1	Paper misfeed (paper take-up section) printer.
P2	Paper misfeed (paper transport section) printer.
P3	Paper misfeed (fusing section) printer.
JO	Card misfeed (fusing section) printer.
E1	Printer power off or cable disconnect printer.
E2	Top cover open printer
E3	Defective toner cartridge.
E4	Defective toner cartridge.

MINOLTA MICRO SP2000 ERROR CODES

L2	Projection lamp malfunction scanner.
C1	Scan unit drive malfunction scanner.
C2	Scan mirror drive malfunction scanner.
C3	Shading correction malfunction scanner.
C4	Cooling fan motor malfunction scanner.
C6	Fusing malfunction printer.
C7	Laser diode malfunction printer.
C8	Polygon motor malfunction printer.
C9	Main motor malfunction printer.
CA	Cooling fan motor malfunction printer.
CB	Communication error scanner or printer.
PE	Paper empty printer.
PO	Paper size error printer.
P1	Paper misfeed (paper take-up section) printer.
P2	Paper misfeed (paper transport section) printer.
P3	Paper misfeed (fusing section) printer.
E1	Printer power OFF or D54cable disconnect printer.
E2	Top cover open printer C6 fusing malfunction printer.

MINOLTA MS7000 MKII ERROR CODES

L1	Broken lens holder.
L2	Projection lamp malfunction.
C1	Scan unit drive malfunction scanner.
C2	Scan mirror drive malfunction.
C3	Condenser lens motor malfunction - shading correction malfunction scanner.
C4	Cooling fan motor malfunction scanner.
C5	AF motor malfunction.
C6	Fusing malfunction printer.
C7	Laser diode malfunction printer.
C8	Polygon motor malfunction printer.
C9	Main motor malfunction printer.
CA	Cooling fan motor malfunction printer.
Cb	Communication error scanner or printer.
CL	Printer clock malfunction scanner.
PE	Paper empty printer.
PO	Paper size error printer.
P1	Paper misfeed (paper take-up) section.
P2	Paper misfeed (paper transport section).
P3	Paper misfeed (fusing section) printer.
E1	Printer power OFF or cable disconnect printer.
E2	Top cover open printer.
EO1	Thermistor (TH1) does not indicate a temperature of 80°C within 22 seconds after power ON.
E4	Defective toner cartridge.