

Status message-remedy chart—printer functions
 NOTE: Messages in this chart appear on the printer control panel's LED display and blink on and off until the condition is corrected. If a display message appears repeatedly after you have performed the recommended correction action, call for service.

KODAK 1000 ERROR CODES

<u>STATUS MESSAGE</u>	<u>EXPLANATION</u>	<u>CORRECTIVE ACTION NEEDED</u>
EO, E1	There has been an electrical circuit failure.	Turn off the workstation, wait 30 seconds, then turn on the workstation, If problem persists, call for service.
LP	The projection lamp is not properly seated in the lamp assembly or has burnt out.	Make sure that the projection lamp is properly seated; replace the lamp if it has burned out (see <i>Replacing the Projection Lamp</i> in Section 3).
PO	The paper cassette is empty or jammed, or there is a paper jam in the paper supply area.	Check the paper cassette. If it empty, refill it (see <i>Refilling the Paper Cassette</i> in Section 3); if it is jammed, remove the jammed paper (see <i>Removing a Paper Jam</i> later in this section). If the paper cassette is not empty or jammed, remove the jammed paper in the paper supply area (see <i>Removing a Paper Jam</i>) later in this section.
P1	There is a paper jam in the paper transport area or the toner fixing unit area.	Remove the jammed paper in the paper transport area or the toner fixing unit area (see <i>Removing a Paper Jam</i>) later in this section).
P2	There is a paper jam in the paper transport area or the toner fixing unit area.	Remove the jammed paper in the toner fixing unit area (see <i>Removing a Paper Jam</i> later in this section). If no paper jam is apparent, check the print delivery area cover to verify that it is properly aligned and closed.