

ALOS Z40 ERROR CODES

P1	Paper empty; Paper misfeed (paper take-up)
P2	Paper misfeed (transport fusing)
P3	Paper misfeed (paper exit)
E1	Defective mirror scan system
C1	Defective scan table sliding system
C3	An abnormally high fusing temperature
C4	An abnormally low fusing temperature
C5	Defective main drive motor
C6	Defective cooling fan motor
C7	Defective toner empty detection

ALOS Z41 ERROR CODES

E-01	Film unit mounting board malfunction
E-02	Electrical circuit board to the inside of a copy board malfunction

ALOS Z43 ERROR CODES

PO	Cassette not slid in position
P1	Paper empty - A paper misfeed at the paper take-up section
P2	A paper misfeed at the transport section
P3	A paper misfeed at the exit section
CO	Main motor malfunction
C1 - 01	Scan table drive motor malfunction
C1 - 02	Scanning motor malfunction
C2	Drum charge / Image transfer corona
C3	Abnormally high fusing temperature
C4	Abnormally low fusing temperature
C5 - 01	Full shutter malfunction
C5 - 02	Right-side shutter malfunction
C5 - 03	Left-side shutter malfunction
C5 - 04	Centering motion failure
C6	Erase lamp malfunction
Cd	Thermistor malfunction
CC - 01	Power unit cooling fan motor malfunction
CC - 02	Protection lamp cooling fan motor malfunction
CC - 03	Cooling fan motor malfunction

ALOS Z-SCAN 46 ERROR CODES

L2	Projection lamp malfunction scanner
Lb	Battery low scanner
C1	Scan unit drive malfunction scanner
C2	Scan mirror drive malfunction scanner
C3	Shading correction malfunction scanner
C4	Cooling fan motor malfunction scanner
C6	Fusing malfunction printer
C7	Laser diode malfunction printer
C8	Polygon motor malfunction printer
C9	Main motor malfunction printer
CA	Cooling fan motor malfunction printer
Cb	Communication error scanner or printer
CC	Communication error scanner or PC
Cd	Communication error scanner or ACF-7
CE	PC Interface kit board malfunction scanner
CF	Firmware malfunction scanner
PE	Paper empty printer
PF	Top paper sensor (paper full)
PO	Paper size error printer
P1	Paper misfeed (paper take-up section) printer
P2	Paper misfeed (paper transport section) printer
P3	Paper misfeed (fusing section) printer
JO	Card misfeed (ACF-7) printer
E1	Printer power off or cable disconnect printer
E2	Top cover open printer
E3	Defective toner cartridge

ALOS Z-SCAN 47 ERROR CODES

L2	Projection lamp malfunction scanner
C1	Scan unit drive malfunction scanner
C2	Scan mirror drive malfunction scanner
C3	Condenser lens motor malfunction - shading correction malfunction scanner
C4	Cooling fan motor malfunction scanner
C5	AF Motor malfunction scanner
C6	Fusing malfunction printer
C7	Laser diode malfunction printer
C8	Polygon motor malfunction printer
C9	Main motor malfunction printer
CA	Cooling fan motor malfunction printer
Cb	Communication error scanner or printer
CL	Printer clock malfunction scanner
PE	Paper empty printer
PO	Paper size error printer
P1	Paper misfeed (paper take-up section) printer
P2	Paper misfeed (paper transport section) printer
P3	Paper misfeed (fusing section) printer
E1	Printer power off or cable disconnect printer
E2	Top cover open printer
EO	1 Thermistor (TH1) does not indicate a temperature of 80 °C within 22 seconds after power ON