

Minolta UC2 Error Codes

TROUBLESHOOTING

Action for Malfunction Codes

When a malfunction code appears on the Display, take necessary action as follows.

E-1 The Fiche Carrier is slid out when roll film has been or is begin loaded.

Resetting Procedure Slide the Fiche Carrier Table back into the correct position.

Check/Replace-
ment Parts at
Malfunction
Recurrence Carrier Changing Sensor (PC4)
Main Control Board (PWB-A)

E-2 Film is not loaded properly.

Resetting Procedure Depress the Clear Key.

Recurrence
Prevention
Action Cleaning of the Loading Roller.
Re-adjust the Film Loading Length (F-4)
Re-adjust the Take-Up Reel Solenoid (SL1)

Check/Replace-
ment Parts at
Malfunction
Recurrence Loading Motor (M3)
Forward Motor (M1)
Reverse Motor (M2)
Take-Up Reel Solenoid (SL1)
Film Encoder (ENC)
Control Panel Board (PWB-B)
Main Control Panel Board (PWB-A)

E-3 The film guide is in the Fiche Mode (in the raised position) when in the Roll Mode.

Resetting Procedure Slide the Fiche Carrier Table back into the correct position.

Recurrence
Prevention
Action Re-adjust the Guide Roller Solenoid (SL3).

Check/Replace-
ment Parts at
Malfunction
Recurrence Roll Film Sensor (PC5)
Carrier Changing Sensor (PC4)
Solenoid Sensor (PC3)
Main Control Board (PWB-A)

E-4

An Open Reel is not mounted properly after the film loading operation.

Resetting

Mount the Open Reel properly.

Check/Replacement Parts at Malfunction Recurrence

Roll Film Sensor (PC5)
Main Control Board (PWB-A)

E-5

The trailing edge of the film has been reached or film has been completely taken up.

Resetting Procedure

Rewind the film completely. Then, turn the Power Switch OFF and, with the -1, +1, and SET Keys held down, turn the Power Switch ON.

Recurrence Prevention Action

Using the Trailer Holder, secure the trailing edge of the film.
Re-adjust the Film Trailer Detection Length (F-5).

Check/Replacement Parts at Malfunction Recurrence

Film Encoder (ENC)
Forward Motor (M1)
Reverse Motor (M2)
Main Control Board (PWB-A)